





# HYDRAULINEN JARRUPUTKITYÖKALUSARJA

## Käyttöohje (Alkuperäisten käyttöohjeiden käänös)


Lue käyttöohjeet huolellisesti ennen laitteen käyttöä ja noudata kaikkia annettuja ohjeita.  
Säilytä ohjeet myöhempää tarvetta varten.

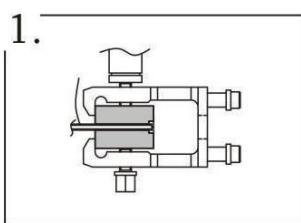


Aseta jarruputken pää tasalle puristusleistien reunan kanssa.

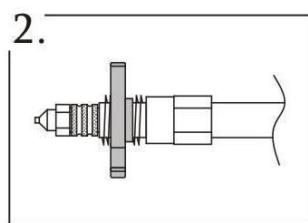


Asenna haluamasi adapteri ja kierrä S-liukukappaletta noin puolen väliin kierrettä.

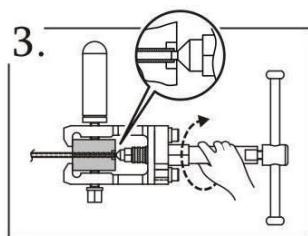


Käännä S-liukukappale paikoilleen ja kierrä vartta, kunnes adapterin pää on jarruputkessa.

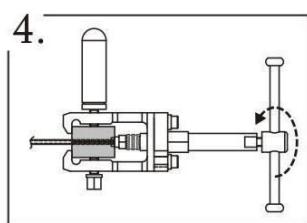


Kierrä T-väännintä kunnes kartio on valmis.

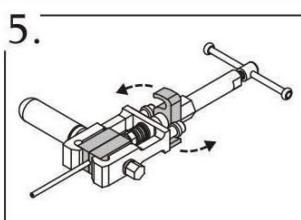


Palauta T-väännin ja irrota S-liukukappale.

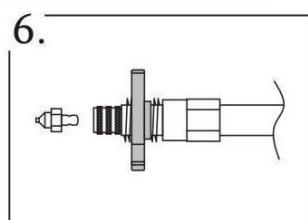

Mikäli haluat tehdä kaksoiskartion, vaihda adapteri.

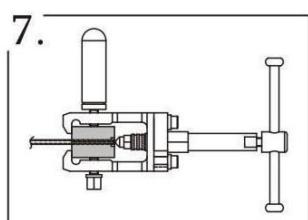

Käännä taas S-liukukappale paikoilleen ja käytä T-väännintä uudestaan.

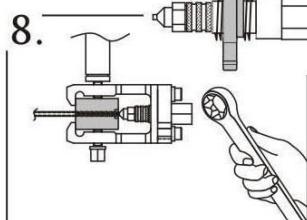

Ahtaissa tiloissa käytä varren sijasta pulttia ja räikkäväännintä.


Tiputa pultin kierteisiin muutama pisara öljyä aina ennen käyttöä.




## HYDRAULIC BRAKE PIPE FLARING TOOL SET

Instruction manual (Original instructions)


Read the instruction manual carefully before using the appliance and follow all given instructions.  
Save the instructions for further reference.

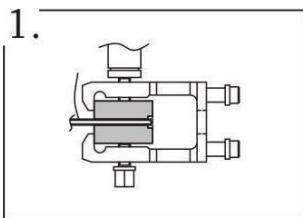


Place the pipe end flush with the die block edge.

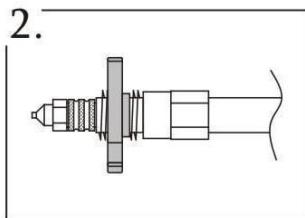


Insert desired adapter and screw the S-slider to approximately half way up the thread.

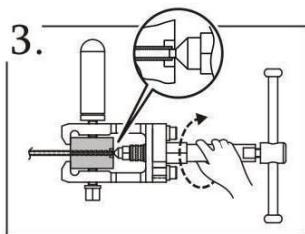


Twist the S-slider in place and turn the arm until the adapter head enters the pipe.

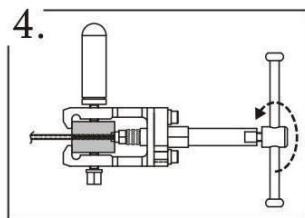


Turn the T-bar until the flare is created.

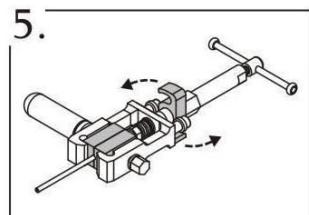


Return the T-bar and disengage the S-slider.

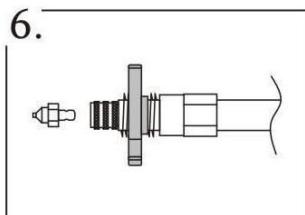

To create a double flare, change the adapter.

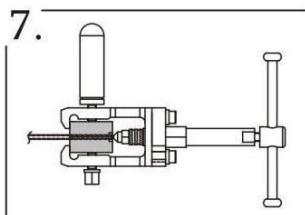

Twist the S-slider in place and use the T-bar again.

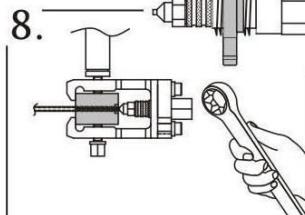

In limited spaces, use the bolt and a ratchet wrench.

Drop few drops of oil on the bolt threads before each use.

Isojoen Konehalli Oy, Keskustie 26, 61850 Kauhajoki As, Finland • Tel. +358 (0)20 1323 232 • tuotepalaute@ikh.fi • www.ikh.fi

Copyright © 2018 Isojoen Konehalli Oy. All rights reserved. Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the written permission of Isojoen Konehalli Oy is prohibited. The content of this document is provided "as is". Except as required by applicable law, no express nor implied warranties of any kind, including the warranties of merchantability and suitability for a particular purpose, are made in relation to the accuracy, reliability or content of this document. Pictures in this document are indicative and may differ from the delivered product. Isojoen Konehalli Oy follows a policy of ongoing development and reserves the right to make changes and improvements to the product and this document without prior notice. EU Declaration of Conformity is not anymore valid and the warranty is voided if the technical features or other features of the product are changed without manufacturer's permission. Isojoen Konehalli Oy is not responsible for the direct or indirect damages caused by the use of the product.