



TRAKTORIN VOIMANULOSOTON KOMPRESSORIN KÄYTTÖOHJE PV300402

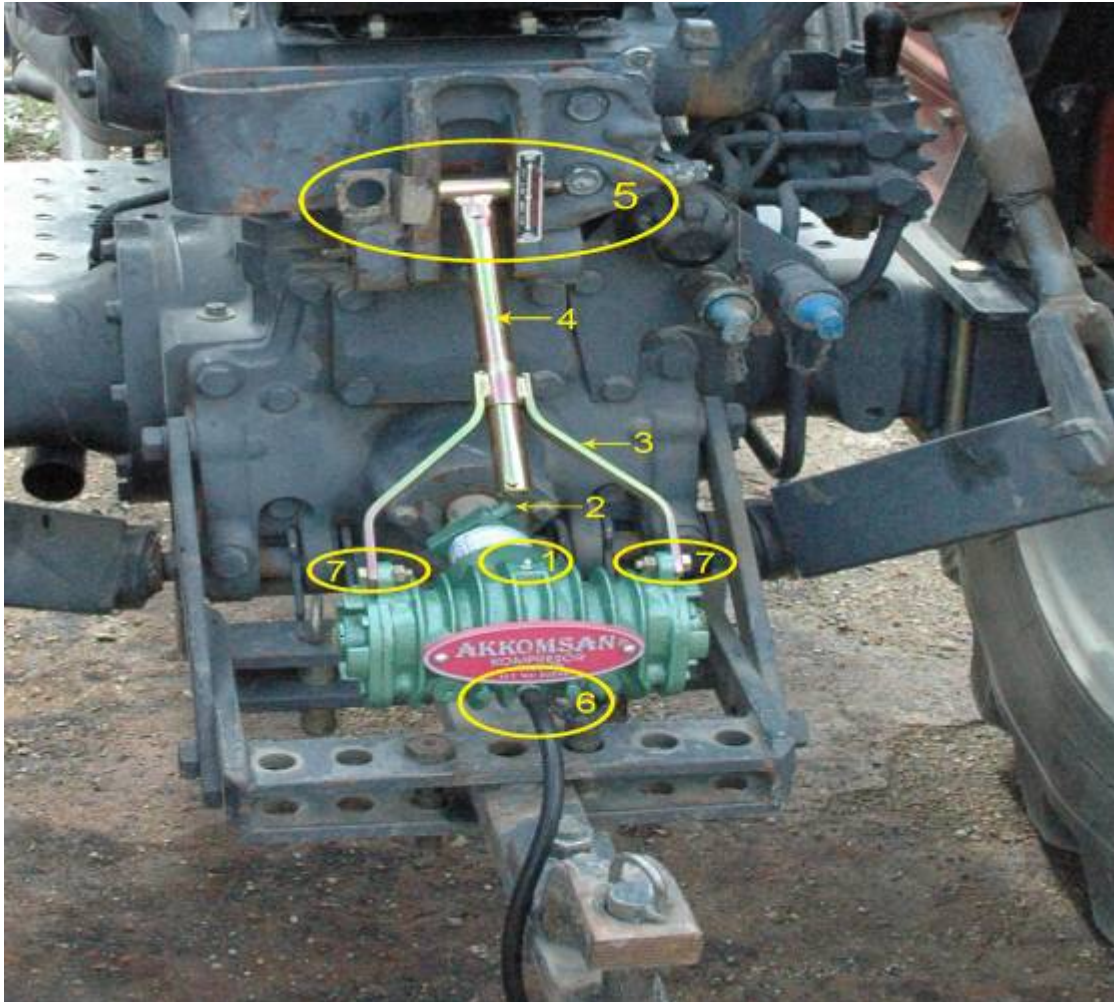


KOMPRESSORIN KÄYTTÖOHJE

- Ennen käyttöönottoa kompressoria pitää rasvata (katso kohta 1)
- Liitä kompressori traktoriin (katso kohta 2)
- Yhdistä kappaleet (katso no 3 ja 4) ja kiinnitä traktoriin.
- Aseta ensin ilmaletku kompressoriin, sitten pyörään käyttämällä erityismutteria (katso no 6)
- Voit alkaa käyttää kompressoria, pidä traktorin voimansiirron pyörimisnopeus n. 300-400 r/min
- Tarkista pultit ja mutterit määräajoin (katso nro 7)
- Säilytä kompressoria käytön jälkeen sen alkuperäisessä laatikossa, suojassa vedeltä, pölyltä ja lialta.

SYLINTEREIDEN LKM	2 KPL
SYLINTERIN HALKAISIJA	55,00MM
ISKUN PITUUS	42,00MM
ISKUKAPASITEETTI	90LT/Min.
TYÖPAINE	8 BAR
TEHONSIIRRON KIERROSLUKU	540RMP
PAINO	9,00 KGS
LETKUN PITUUS	4,50MM x4,00 METERS
ILMALETKUN KIINNIKE	8x13
PAKKAUS	PAHVILAATIKKO

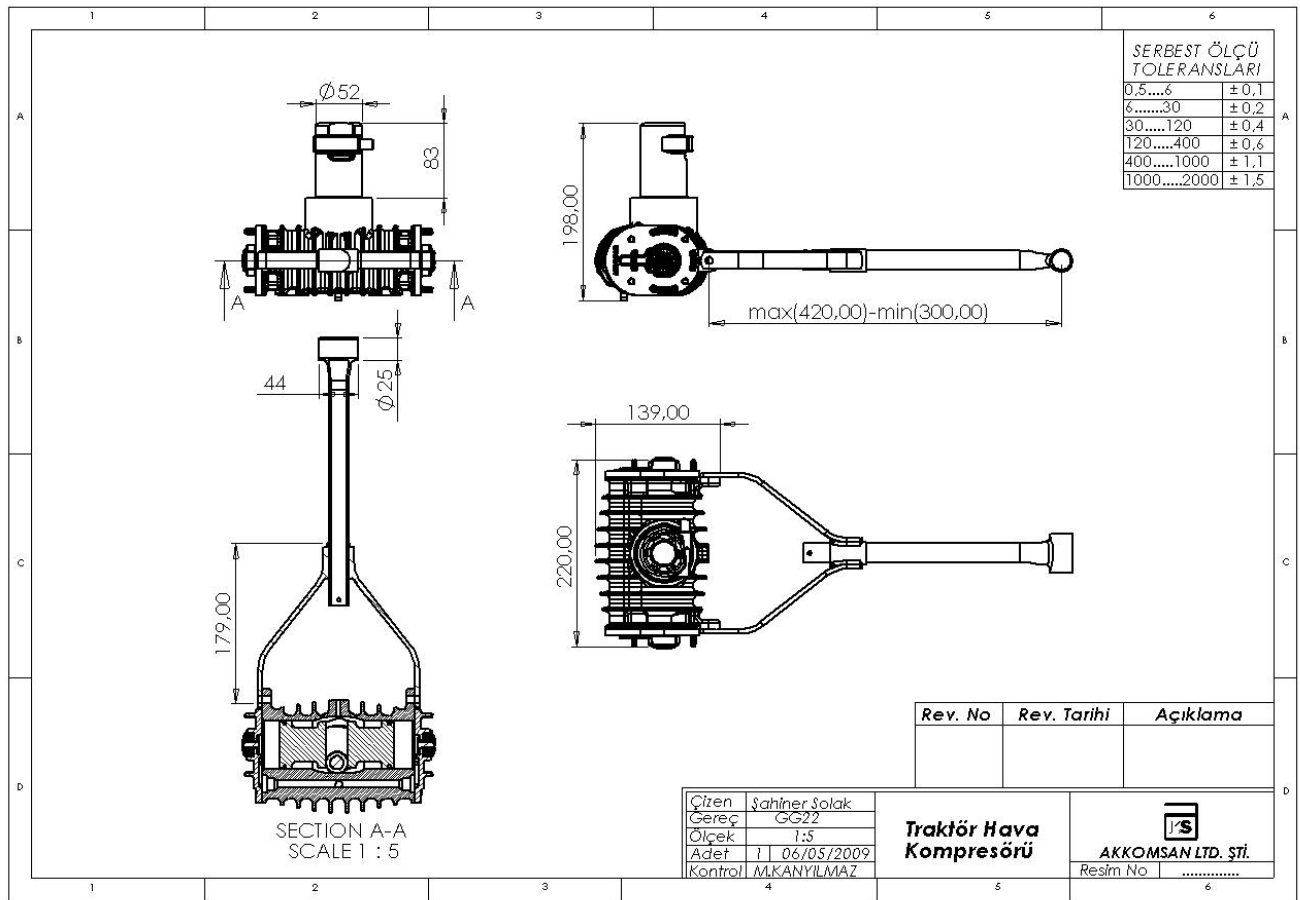

TRAKTOR PTO AIR COMPRESSOR PV300402

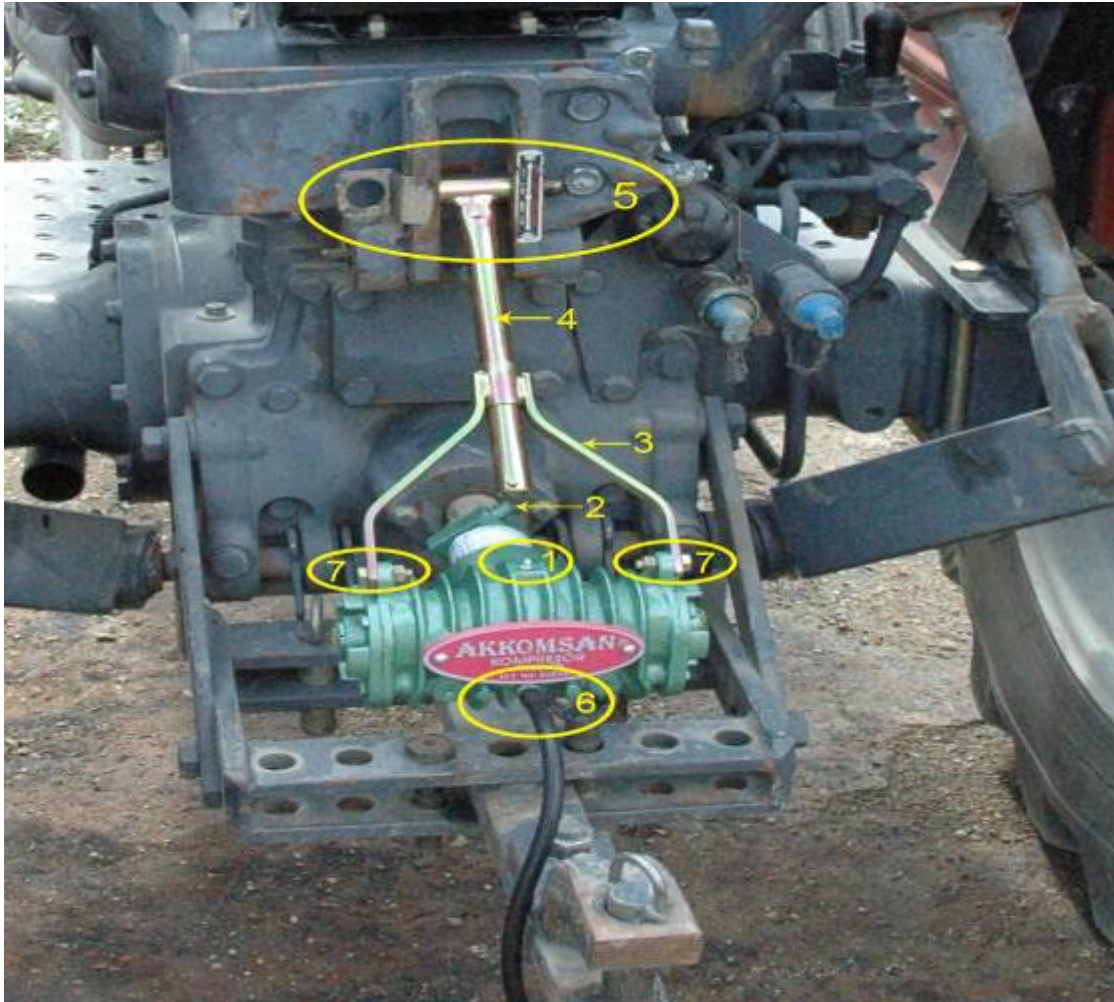

COMPRESSOR USER GUIDE

- Before using your compressor, firstly you have to inject 60 gr grease oil from the screw of grease (See Number 1) ,(Pumping the Grease pump 20 times is approximately 100 gr.)
- Connect the compressor to your tractor using the special lock (See Number 2).
- Connect the pieces (See Number 3 & 4) to the back of your tractor.
- Set the air hose to your compressor first, then to your wheel by its special nut(See Number 6)
- You can start using the compressor by keeping PTO (power transportation organ) of the tractor between 300-400 cycles.
- Check the bolts and nuts (See Numbers 7) periodically.
- Keep the compressor in its original box to protect it from water, dust, and dirtiness, etc.after every use.

CYLINDER QTY.	2 AD/PCS
CYLINDER DIAMETER	55,00MM
STROKE	42,00MM
STROKE CAPACITY	90LT/Min.
WORKING PRESSURE	8 BAR
PTO SAFHT CYCLE	540RMP
WEIGHT	9,00 KGS
AIR HOSE	4,50MM x4,00 METERS
AIR HOSE CLAMP	8x13
PACKING	CARTON BOX

