


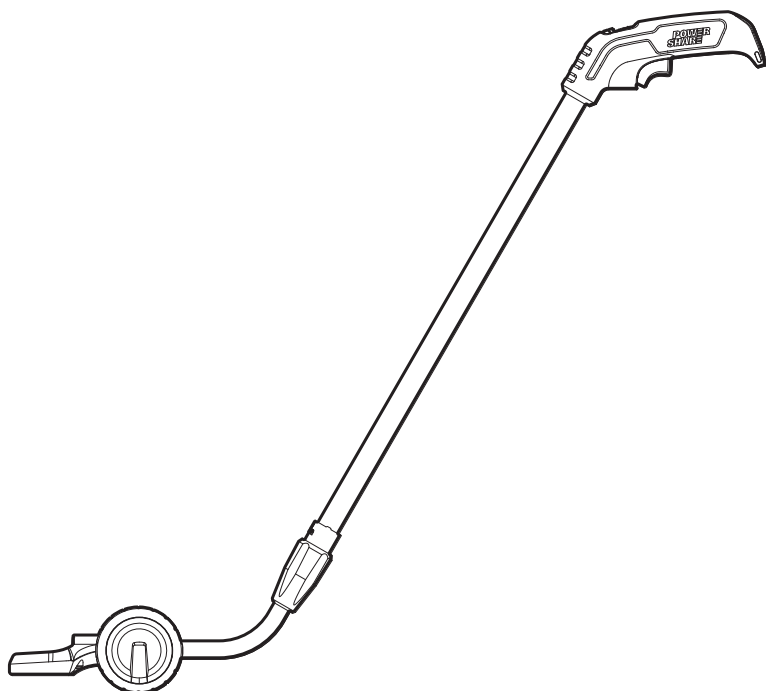

Telescopic handle

EN

P05


Teleskooppikahva







FIN

P06

WA0040

Original instructions	EN
Alkuperäiset ohjeet	FIN

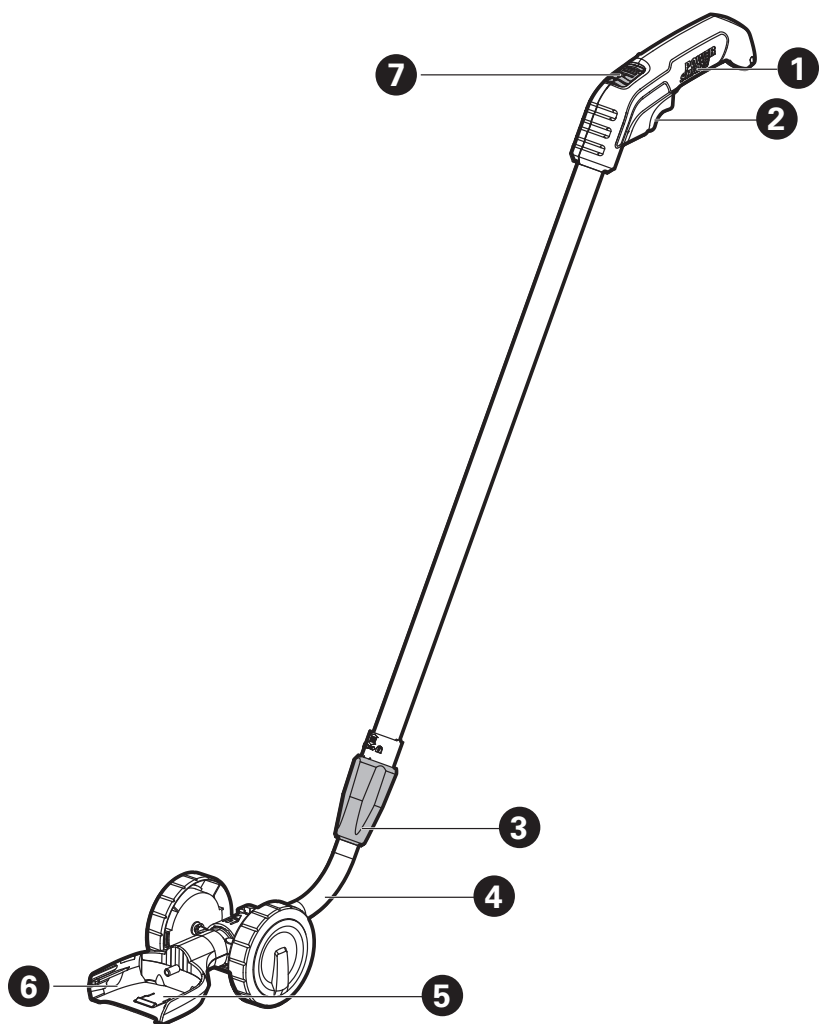

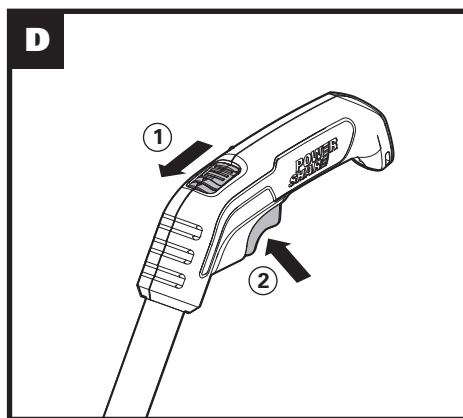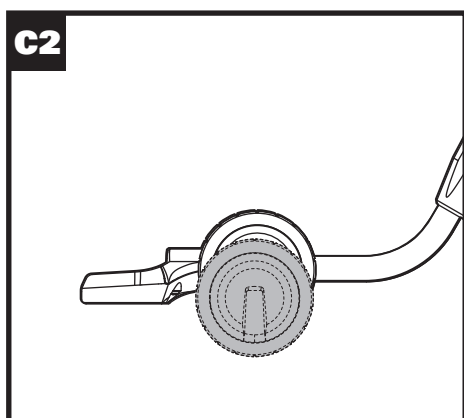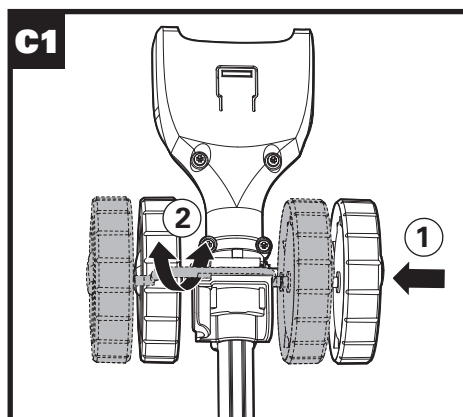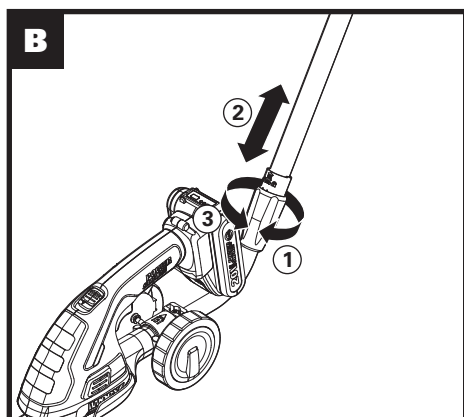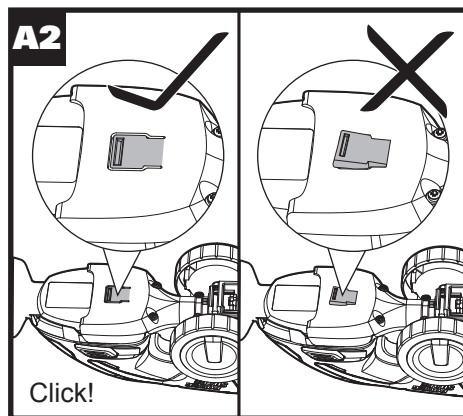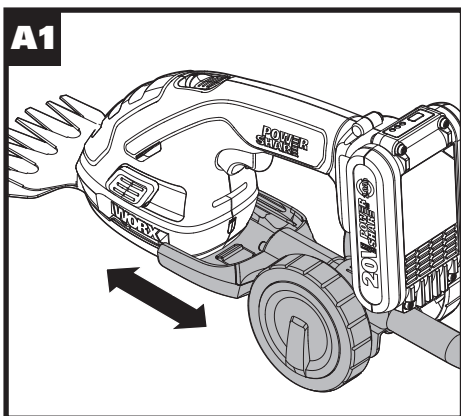

COMPONENT LIST

1. TELESCOPIC POLE HANDLE
2. ON/OFF SWITCH
3. LOCKING KNOB
4. INNER HANDLE
5. CONNECTION PIN
6. CONNECTION BRACKET
7. LOCK-OFF BUTTON

TECHNICAL DATA

Length (height to ground)*	70cm-110cm
Max telescopic length	40cm
Cutting height	
Lower level	25mm
Higher level	43mm
Weight	0.5kg

* Length (height to ground) means the vertical distance from the telescopic pole handle to the ground.

NOTE: Before using the telescopic handle, read the instruction book carefully as well as the instruction book of Grass Shear.

 **WARNING: Do not touch Lock-out Button and/or On/Off Switch when assembling the telescopic handle. Failure to do so could cause an accident, resulting in possible serious personal injury.**

ASSEMBLY AND OPERATION

1. ASSEMBLING/REMOVING THE TELESCOPIC HANDLE (See Fig. A1)

Assembling: Align and insert the handle connection bracket into the machine.
Removing: Disconnect the handle connection bracket by pressing and holding down on the locking tab (See Fig. A2) and then pulling the shear off the handle.

NOTE: After assembly, make sure the connection pin on the bottom of the connection bracket is flat, if it is protruding, please re-assemble the handle. (See Fig. A2)
NOTE: Make sure the telescopic handle is locked into position securely before operation.

2. ADJUSTING THE HANDLE LENGTH (See Fig. B)

Loosen the locking knob to extend the handle, and the handle will slide freely.

Then tighten the locking knob to lock the handle in position.
NOTE: The locking knob is used to hold the handle in position at any extended length.

3. ADJUSTING THE CUTTING HEIGHT (See Fig. C1, C2)

Press the left wheel to push the spring inside. Hold the spring in position and then rotate the wheels to adjust the cutting height. Release the spring and then the wheels will be fixed in position.
NOTE: The telescopic handle has two cutting height levels (25mm & 43mm).

4. ON/OFF SWITCH (See Fig. D)

Push the Lock-off button forward to the unlock position and then fully press the On/Off switch. Then release the Lock-off button. This will turn the machine on. Release the On/Off switch will turn the machine off.

KONEEN OSAT

1.	TELESKOOPPIVARREN KAHVA
2.	ON/OFF-VIRTAKYTKIN
3.	LUKITUSNUPPI
4.	SISEMPI KAHVA
5.	KIINNITYSTAPPI
6.	LIITOSPALA
7.	VAPAUTUSPAINIKE

TEKNISET TIEDOT

Pituus (korkeus maasta)*	70–110 cm
Teleskooppivarren enimmäispituus	40 cm
Leikkuukorkeus	
Alin taso	25 mm
Korkein taso	43 mm
Paino	0,5 kg

6 * Pituus (korkeus maasta) tarkoittaa pystysuoraa etäisyyttä teleskooppivarren kahvasta maahan.

HUOM. Ennen kuin käytät teleskooppikahvaa, lue ohjekirja huolellisesti sekä ruohonleikkausopas.

 **VAROITUS: Älä kosketa vapautuspainiketta ja/tai virtakytkintä, kun asennat teleskooppikahvaa. Tämän seurauksena voi olla onnettomuus, joka voi johtaa mahdollisesti vakavaan henkilövahinkoon.**

KOKOAMINEN JA KÄYTTÖ

1. TELESKOOPPIKAHAVAN KOKOAMINEN/IRROTTAMINEN (KATSO KUVA A1)
Kokoaminen: Kohdista ja aseta kahvan liitospala koneeseen.
Irrotus: Irrota kahvan liitospala pitämällä lukitusnuppia painettuna (katso kuva A2) ja vedä leikkuri irti kahvasta.
HUOM. Varmista asennuksen jälkeen, että liitospalan pohjassa oleva kiinnitystappi on tasainen; jos se on ulkoneva, asenna kahva uudelleen. (Katso kuva A2)
HUOM. Varmista ennen käyttöä, että teleskooppikahva on lukittu kunnolla paikalleen.

2. KAHVAN PITUUDEN SÄÄTÄMINEN (KATSO KUVA B)
Löysää lukitusnuppi kahvan pidentämiseksi, ja kahva liukuu vapaasti.
Kivistä sitten lukitusnuppi, jotta kahva lukittuu paikalleen.
HUOM. Lukitusnuppia käytetään kahvan pitämiseen paikallaan kaikilla pituuksilla.

3. LEIKKUUKORKEUDEN SÄÄTÄMINEN (KATSO KUVA C1, C2)
Paina vasenta pyörää työntääksesi jousen sisälle. Pidä jouta paikallaan ja säädä leikkuukorkeutta kiertämällä pyöriä. Kun vapautat jousen, pyörät lukittuvat paikalleen.
HUOM. Teleskooppikahvassa on kaksi leikkuukorkeutta (25 mm & 43 mm). .

4. ON/OFF-VIRTAKYTKIN (KATSO KUVA D)
Paina vapautuspainiketta eteenpäin lukituksen avausasentoon ja paina sitten On/Off-virtakytkin pohjaan asti. Vapauta sitten vapautuspainike. Tämä kytkee koneen päälle.
On/off-virtakytkimen vapautus sammuttaa koneen.

